



F1A 3/32" Balsa 2 req.

F7 3/32" Balsa
2 req.

F6 3/32" Balsa 2 req.

R3
3/32" Balsa
2 req.

W8

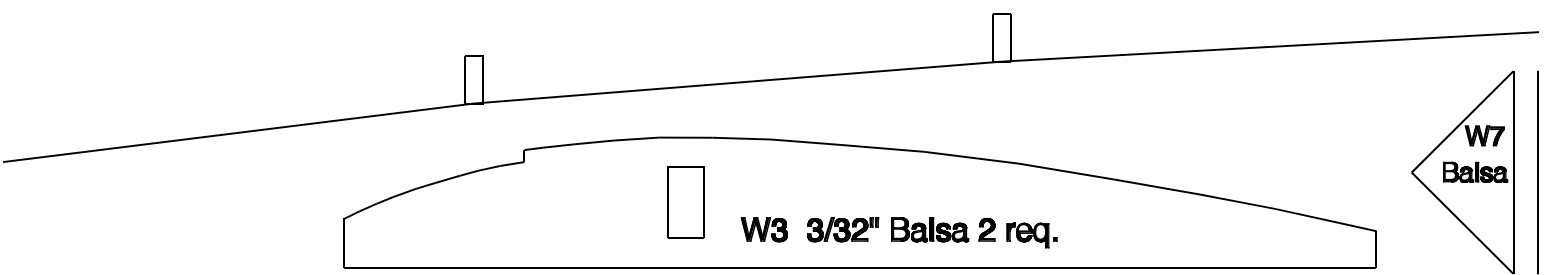

Windscreen Block

Balsa 2 req.

1/16" Balsa 2 req.


6" Balsa 10 req.

No Slot | Slot



1/16" Balsa

Cut this full sheet in 1/2 with this part going under


W9

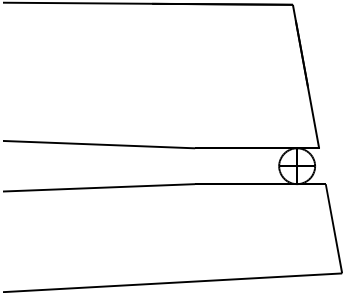

3/32"
4 req.

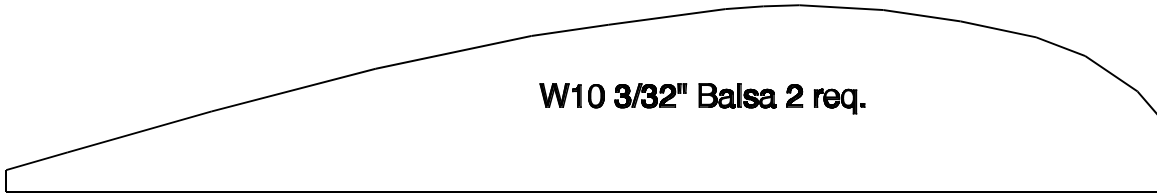

the first part to cut out duplicates of front half

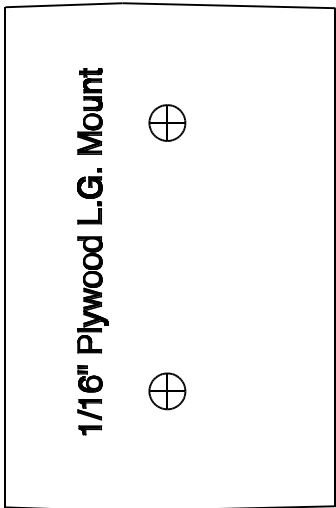

This Ply
Shc
is n



3/32" Balsa

2 Sheets req.

**s is the template for the 1/16"
wood Landing Gear Plate.
own here as this part of this template
ot used.**